



JOYSTICK OPTION FOR CUSTOMER SUPPLIED VALVE INSTALLATION AND OPERATING INSTRUCTIONS

The following is intended to provide the basic instructions for installation, operation and maintenance of the Joystick option for Customer Supplied Valve.

The joystick is unsealed and therefore intended for use in enclosed areas where water cannot penetrate the enclosure.

Read these operating instructions and the instructions for the appropriate monitor before operating or installing your unit.

PRODUCT WARNINGS:


- ⚠ WARNING: Keep water out of the joystick control box. Exposure to water will cause damage to the unit.
- ⚠ WARNING: Do not use the joystick control when the override cranks are being used or are in position for use.


GENERAL INSTRUCTIONS

Review the instructions and wiring diagram before installing.

Follow these wiring diagram instructions to install this joystick controller.

WIRING DIAGRAM

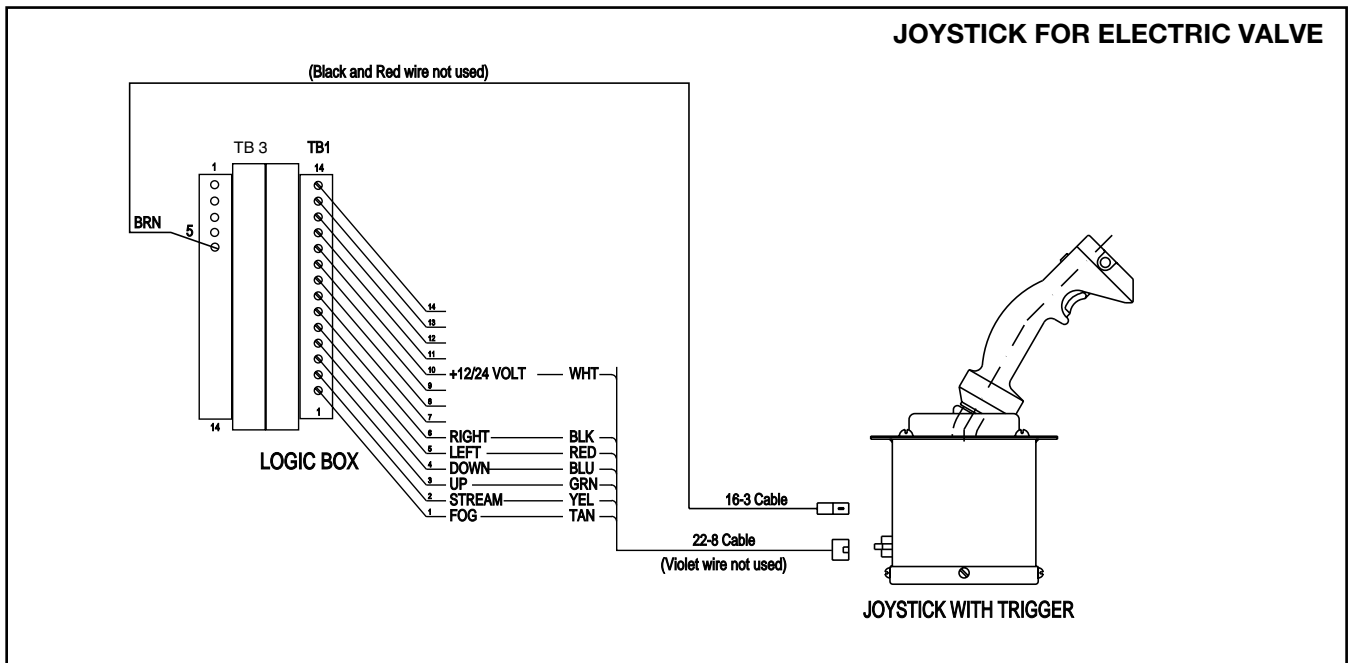

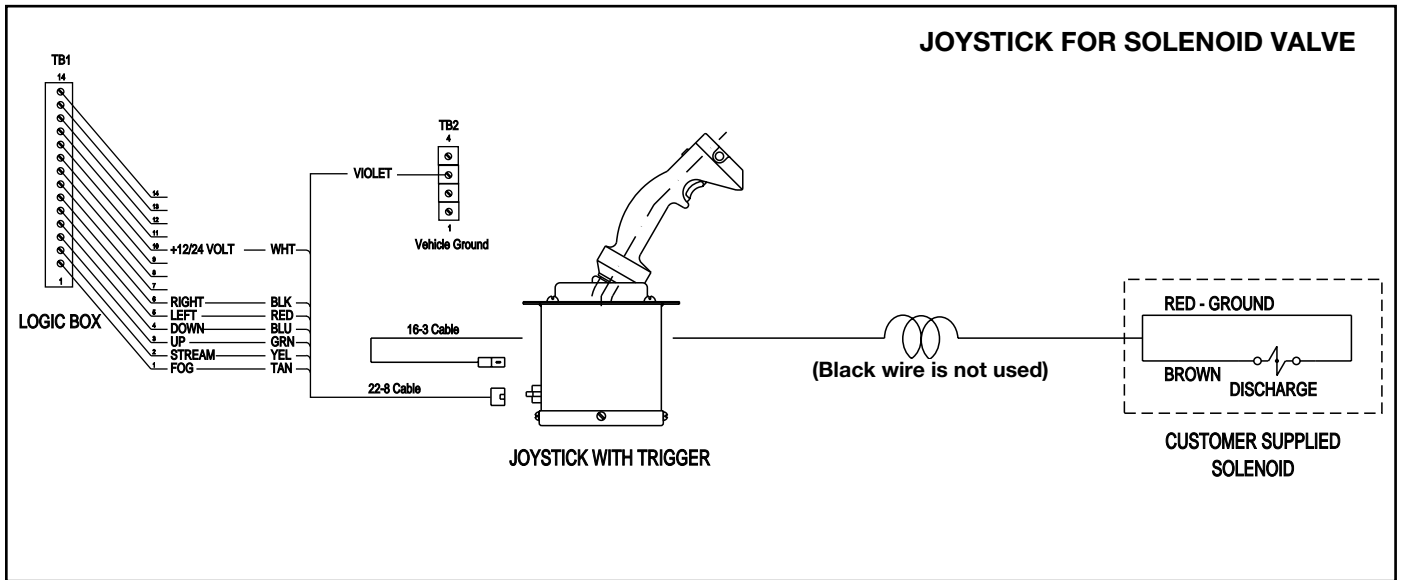

OPERATING INSTRUCTIONS

The joystick controller is used to control the monitor and the nozzle. To change the nozzle pattern press the toggle switch in the appropriate direction. To change the horizontal position of the monitor, move the joystick right or left until the desired position is achieved. To change the vertical position of the monitor, move the joystick forward or back until the desired elevation is achieved.



ISO 9001 REGISTERED COMPANY

PHONE: 330.264.5678 or 800.228.1161 | FAX: 330.264.2944 or 800.531.7335 | www.akronbrass.com
 Available in Canada through AKRON MANUFACTURING COMPANY
 PHONE: 519.773.8431 | FAX: 519.773.3794

REVISED 12/05

WARRANTY AND DISCLAIMER: We warrant Akron Brass products for a period of five (5) years after purchase against defects in materials or workmanship. Akron Brass will repair or replace product which fails to satisfy this warranty. Repair or replacement shall be at the discretion of Akron Brass. Products must be promptly returned to Akron Brass for warranty service. We will not be responsible for: wear and tear; any improper installation, use, maintenance or storage; negligence of the owner or user; repair or modification after delivery; damage, failure to follow our instructions or recommendations; or anything else beyond our control. WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE INCLUDED IN THIS WARRANTY STATEMENT, AND WE DISCLAIM ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Further, we will not be responsible for any consequential, incidental or indirect damages (including, but not limited to, any loss of profits) from any cause whatsoever. No person has authority to change this warranty.

© Premier Farnell Corporation. 2000 All rights reserved. No portion of this can be reproduced without the express written consent of Premier Farnell Corporation.

A Premier Farnell Company