



SaberJet™ Tip Replacement Instructions

Note: Lubricate all O-Rings using Parker O-Ring Lubricant or equivalent petroleum based lubricant.

DISASSEMBLY

1. Twist the fog nozzle shutoff to the off position.
2. Loosen the setscrew on the right side of the nozzle body located just behind the twist shutoff bumper.
3. Twist the fog nozzle shutoff into the flush position.
4. Remove the current tip by unscrewing it using an open face spanner wrench.
5. Remove the baffle head from the old tip by pushing it directly off the back of the tip.

Note: Any plastic shims, which are located between the baffle head and the tip head, should be removed and reassembled in the same location on the new tip.

REASSEMBLE

1. Lubricate the o-ring on the base of the new tip.
2. Install the baffle head from the old tip onto the new tip, by pushing it snug against the head of the new tip.
Note: Be sure all the plastic shims from the old tip are installed between the head of the new tip and the baffle head.
3. Install the new tip, with the old baffle head and shims in place, by screwing it back into the body of the nozzle using an open face spanner wrench.
4. Twist the Fog nozzle shutoff back to the off position.
6. Tighten down the setscrew on the right side of the nozzle body located just behind the twist shutoff bumper.



ISO 9001 REGISTERED COMPANY

PHONE: 330.264.5678 or 800.228.1161 | FAX: 330.264.2944 or 800.531.7335 | www.akronbrass.com
Available in Canada through AKRON MANUFACTURING COMPANY
PHONE: 519.773.8431 | FAX: 519.773.3794

REVISED 10/01

WARRANTY AND DISCLAIMER: We warrant Akron Brass products for a period of five (5) years after purchase against defects in materials or workmanship. Akron Brass will repair or replace product which fails to satisfy this warranty. Repair or replacement shall be at the discretion of Akron Brass. Products must be promptly returned to Akron Brass for warranty service.

We will not be responsible for: wear and tear; any improper installation, use, maintenance or storage; negligence of the owner or user; repair or modification after delivery; damage; failure to follow our instructions or recommendations; or anything else beyond our control. WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE INCLUDED IN THIS WARRANTY STATEMENT, AND WE DISCLAIM ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Further, we will not be responsible for any consequential, incidental or indirect damages (including, but not limited to, any loss of profits) from any cause whatsoever. No person has authority to change this warranty.

© Premier Farnell Corporation, 2000 All rights reserved. No portion of this can be reproduced without the express written consent of Premier Farnell Corporation.

A Premier Farnell Company