



## WATER FLOW TEST KIT STYLE 9015


### Instructions for Replacing Pitot Blade on Water Flow Test Kit.

Tools and materials required:

Vise	3/32" Hex Key
5/32" Drill Bit	Parlube or equivalent lubricant

### Replacement Instructions:

1. Unscrew lock ring and remove tip from body.
2. Rotate pitot blade/adapter tube to operating position and lock in place with thumb screw.
3. Loosen set screw(s); remove and discard old pitot blade assembly.
4. Secure Test Kit body in vise.
5. Insert alignment fixture into the body and seat it firmly against the stop shoulder.  
The pitot alignment hole in one end of the fixture should be visible.
6. Lubricate pitot blade assembly adapter tube and O-ring.
7. Install O-ring on blade assembly.
8. Insert pitot blade assembly into adapter tube until the pitot tip seats firmly in the alignment fixture hole.
9. Insert the 5/32" drill bit into the first adapter tube set screw hole and make a small dimple in the top of the pitot blade assembly. (See diagram)
10. Slide pitot blade out slightly and rotate it in order to remove alignment fixture.
11. Reposition blade assembly and dimple centered under first set screw hole.
12. Install and tighten dog point set screw.
13. Install and tighten cup point set screw in second adapter tube set screw hole. (If applicable)
14. Replace tip and lock ring.

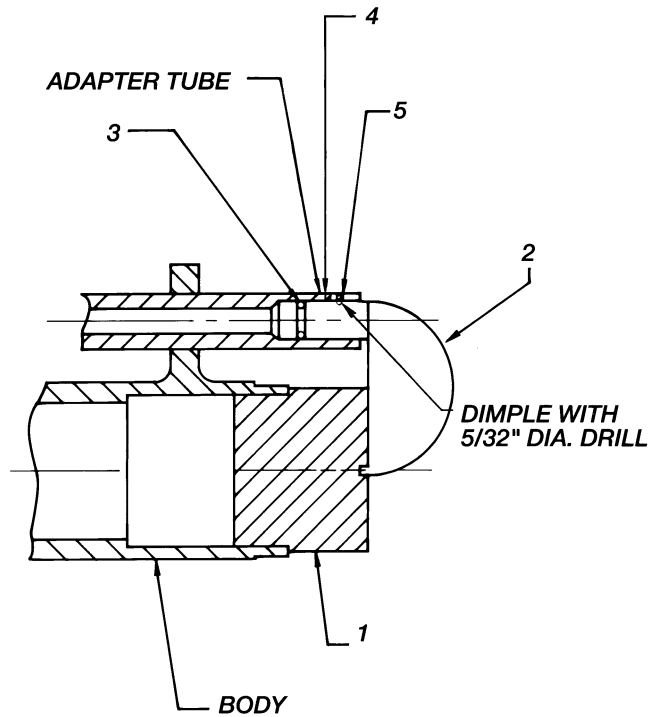

ITEM NO.	DESCRIPTION	PART NUMBER	QUANTITY
1	Alignment Fixture	7-12-269	1
2	Pitot Blade Assembly	110087	1
3	O-Ring	7-57-022	1
4	Set Screw	7-65-024	1
5	Set Screw	7-65-117	1



ISO 9001 REGISTERED COMPANY

PHONE: 330.264.5678 or 800.228.1161 | FAX: 330.264.2944 or 800.531.7335 | [www.akronbrass.com](http://www.akronbrass.com)  
 Available in Canada through AKRON MANUFACTURING COMPANY  
 PHONE: 519.773.8431 | FAX: 519.773.3794

AB-602 (REV. 04/00)

**WARRANTY AND DISCLAIMER:** We warrant Akron Brass products for a period of five (5) years after purchase against defects in materials or workmanship. Akron Brass will repair or replace product which fails to satisfy this warranty. Repair or replacement shall be at the discretion of Akron Brass. Products must be promptly returned to Akron Brass for warranty service.

We will not be responsible for: wear and tear; any improper installation, use, maintenance or storage; negligence of the owner or user; repair or modification after delivery; damage; failure to follow our instructions or recommendations; or anything else beyond our control. WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE INCLUDED IN THIS WARRANTY STATEMENT, AND WE DISCLAIM ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Further, we will not be responsible for any consequential, incidental or indirect damages (including, but not limited to, any loss of profits) from any cause whatsoever. No person has authority to change this warranty.

© Premier Farnell Corporation. 2000 All rights reserved. No portion of this can be reproduced without the express written consent of Premier Farnell Corporation.

**A Premier Farnell Company**