

## B1-SW SWING-OUT<sup>™</sup> VALVE ADAPTER MOUNTING INSTRUCTIONS

The B1-SW adapter assembly is designed for use on Waterous Pumps using Akron Swing-out Valves. The design allows valve to be positioned close to the pump for use with rack and sector or push/pull remotes while staying within our minimum recommended handle length of 5".

## **STANDARD MOUNTING**

- 1. Two half clamps are provided to mount to the pump for holding valve. (Each clamp has two (2) 7/16-14 tapped holes.) These are designed for 7/16-14 bolts to be inserted from the back side of the pump flange into each clamp half.
- 2. If pump manifold flange has tapped holes, the tapped holes in the clamps must be drilled out with a 15/32 drill.
- 3. Attach bottom clamp (large I.D. against pump flange) to pump flange allowing enough play to set valve in.
- 4. Place O ring in face groove of B1-SW flange and set in bottom clamp aligning notches to clear bolts.

NOTE: B1-SW mount to valve body must have the two flat head screws on the bottom side.

- 5. Install top clamp over B1-SW adapter and connect.
- 6. Tighten both clamps after positioning valve.

## **STUD MOUNTING**

1. If pump flange has a stud on the lower side, the drilled out tapped hole should slip over and nut is to be used. Bolts used in other three (3) holes.



## PHONE: 330.264.5678 or 800.228.1161 | FAX: 330.264.2944 or 800.531.7335 | akronbrass.com

REVISED: 6/11

WARRANTY AND DISCLAIMER: We warrant Akron Brass products for a period of five (5) years after purchase against defects in materials or workmanship. Akron Brass will repair or replace product which fails to satisfy this warranty. Repair or replacement shall be at the discretion of Akron Brass. Products must be promptly returned to Akron Brass for warranty service.

We will not be responsible for: wear and tear, any improper installation, use, maintenance or storage; negligence of the owner or user; repair or modification after delivery; damage; failure to follow our instructions or recommendations; or anything else beyond our control. WE MAKE NO WARRANTES, EXPRESS OR IMPLED, OTHER THAN THOSE INCLUDED IN THIS WARRANTY STATEMENT; AND WE DISCLAM ANYI IMPLEM WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Further; we will not be responsible for any consequential, incidental or indirect damages (including, but not limited to, any loss of profits) from any cause whatsoever. No person has authority to change this warranty.

@ Akron Brass Company. 2011 All rights reserved. No portion of this can be reproduced without the express written consent of Akron Brass Company.