





CONVERSION OF OLD TORK-LOK® TO NEW TORK-LOK FOR STYLE 1581 WYE

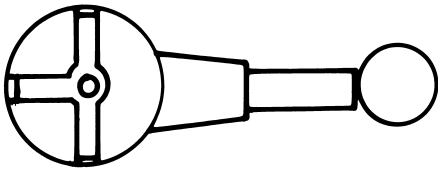

Old Style Tork-Lok
Handle Assembly
Figure 1

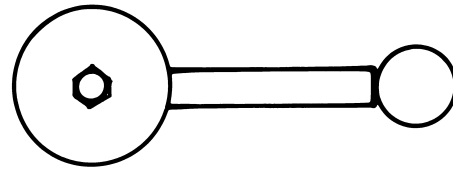

Current Style New Tork-Lok
Handle Assembly
Figure 2

These instructions are written to assist in converting the old style Tork-Lok handle assembly to the current design as shown in Figure 2.

I. TOOLS REQUIRED

- 9/64" (3.57 mm) allen wrench
- 5/32" (3.97 mm) allen wrench
- 3/4" (19.05 mm) socket wrench or an adjustable type wrench
- Heavy-duty snap ring wrench for I.D. ring.

CAUTION: EYE PROTECTION SHOULD BE USED DURING ASSEMBLY AND DISASSEMBLY.

II. DISASSEMBLY OF OLD TORK-LOK

1. Using 5/32" (3.97 mm) allen wrench, remove socket head cap screw from handle housing.
2. Lift off handle housing, rod and ball.
3. Using snap ring wrench remove large I.D. snap ring. Care must be taken to maintain complete engagement of wrench pins in holes.
4. Remove Teflon shim and drive bearing.
5. Using 9/64" (3.57 mm) allen wrench, remove socket head cap screw from trunnion.
6. Lift off washer and (4) locking dogs.
7. Lift out drive plate and additional Teflon shims.
8. Using 9/64" (3.57 mm) allen wrench, remove (4) socket head screws.
9. Lift off trunnion bearing and remove trunnion.

III. REASSEMBLY OF NEW TORK-LOK

1. Using 3/4" (19.05 mm) socket, remove hex head screw from handle sub-assembly.
2. Lift off fiber washer, handle cover, handle assembly and stop plate.
3. Using 5/32" (3.97 mm) allen wrench, remove (4) socket head cap screws and lift off trunnion retaining plate.
4. Remove ball trunnion, being careful not to lose (4) socket head cap screws remaining in adapter.
5. Install adapter onto old valve body and tighten down (4) socket head screws using 5/32" (3.97 mm) allen wrench.
6. Install ball trunnion, aligning pilot on trunnion with hole in top of the ball.
7. Install trunnion retaining plate. Be careful to align spring tabs with cut-out in ball trunnion. If misaligned, tork feature will not work effectively.
8. Install (4) socket head cap screws and, using 5/32" (3.97 mm) allen wrench, tighten down.
9. Install stop plate and position so that open and close position of the ball meets requirements.
10. Install handle assembly, handle cover, and fiber washer.
11. Using 3/4" (19.05 mm) socket wrench, install and tighten down hex head cap screw. Check function and make sure stop limits of handle provide rotation desired on the ball. If not, disassemble following steps 1 and 2. Reposition stop plate as desired and reassemble following steps 9 through 11.



ISO 9001 REGISTERED COMPANY

PHONE: 330.264.5678 or 800.228.1161 | FAX: 330.264.2944 or 800.531.7335 | www.akronbrass.com
Available in Canada through AKRON MANUFACTURING COMPANY
PHONE: 519.773.8431 | FAX: 519.773.3794

AB - 260 (REV. 2/97)

WARRANTY AND DISCLAIMER: We warrant Akron Brass products for a period of five (5) years after purchase against defects in materials or workmanship. Akron Brass will repair or replace product which fails to satisfy this warranty. Repair or replacement shall be at the discretion of Akron Brass. Products must be promptly returned to Akron Brass for warranty service.
We will not be responsible for: wear and tear; any improper installation, use, maintenance or storage; negligence of the owner or user; repair or modification after delivery; damage; failure to follow our instructions or recommendations; or anything else beyond our control. WE MAKE NO WARRANTIES, EXPRESS OR IMPLIED, OTHER THAN THOSE INCLUDED IN THIS WARRANTY STATEMENT, AND WE DISCLAIM ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. Further, we will not be responsible for any consequential, incidental or indirect damages (including, but not limited to, any loss of profits) from any cause whatsoever. No person has authority to change this warranty.

© Premier Farnell Corporation. 2000 All rights reserved. No portion of this can be reproduced without the express written consent of Premier Farnell Corporation.

A Premier Farnell Company